

SWE45: Rotate gearbox

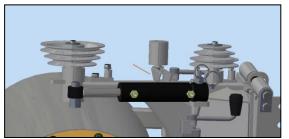


- 1. Remove the cover and belt
- 2. Dismount bearings on both sides and remove side plate

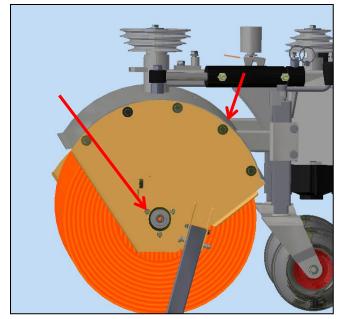

- 5. Mount sweeping rollers
- 6. Mount side plates
- 7. Mount the bearings
- 8. Mount the belt and cover agian

3. Pull out both sweeping rollers

4. Unscrew bolts on gearbox, turn gearbox by 180 $^\circ$ and screw the gearbox again

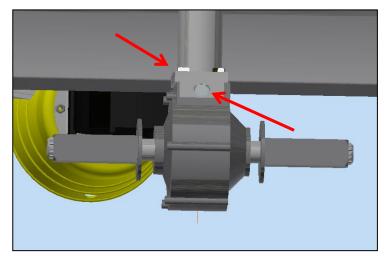

matev